
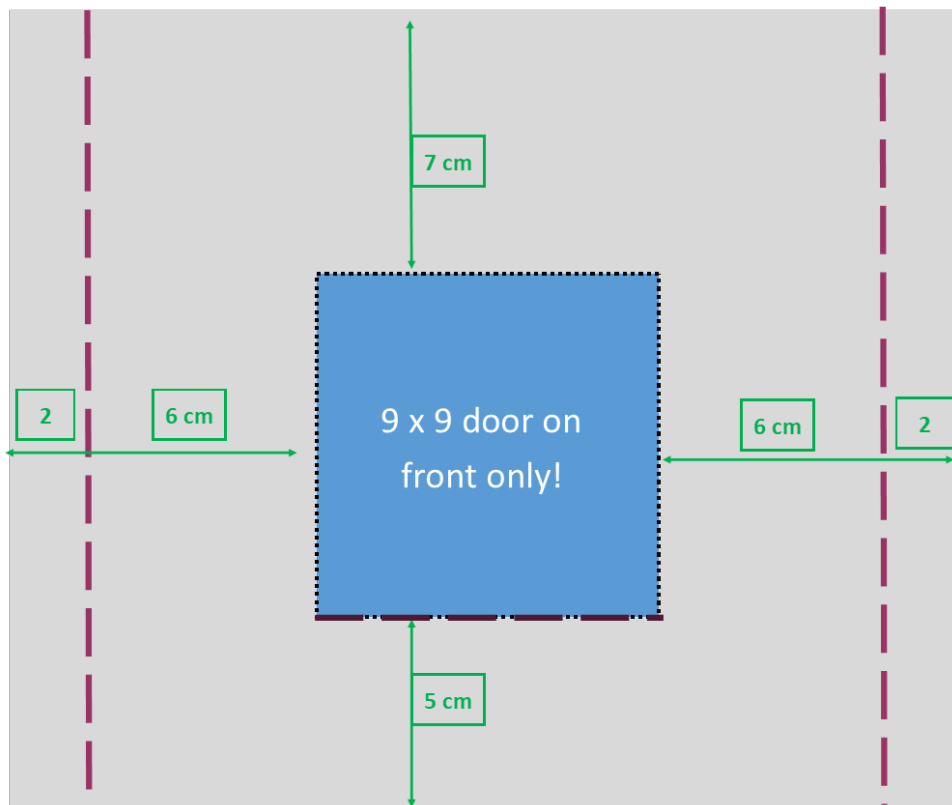


Supplies: heavy cardboard or corrugated plastic. Packing tape or duct tape. Scissors and Xacto knife.

Cut the top: 15 cm high and 25 cm wide. Score a line 2 cm in from each side to fold it down to attach to the base. (See the dashed purple lines in the diagram.) At each corner, cut off a 2 cm by 2 cm square. Cut a hole in the center to fit whatever you'll be attaching. If it's 4 "

Cut a front panel and a back panel. Each should be 21 cm high and 25 cm wide. On both of them, score a line 2 cm from the left side and 2 cm from the right. You'll fold these over to tape to the side panels. On ONE of these panels, cut a 9x9 cm door (at least 5 cm up from the bottom.) You'll cut the top and sides of the door, but just SCORE the bottom so it can fold inwards.

Cut two side panels, 21 cm high and 10 cm wide. Then, tape front and back panels to side. Tape top onto the base.

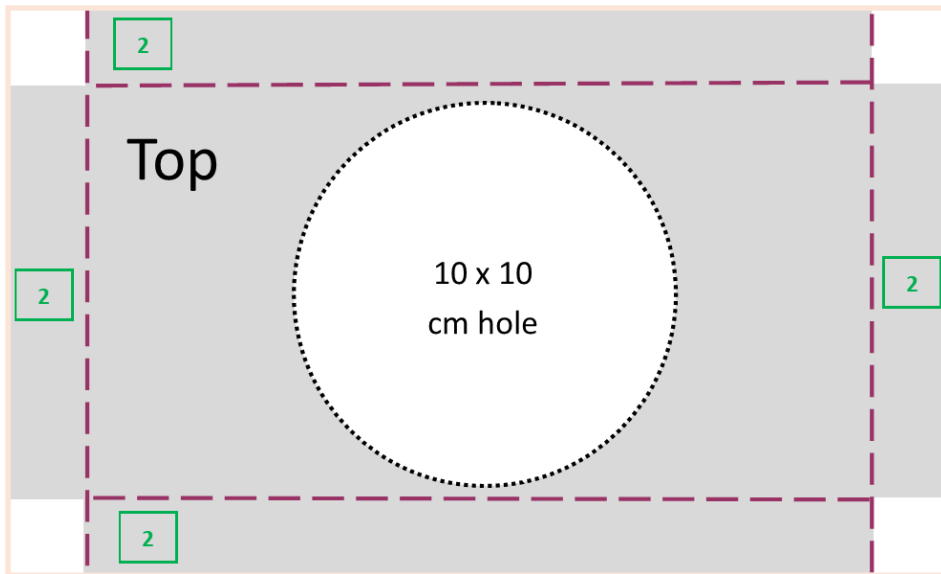

Cut 2 side panels.

Each 21 x 10 cm